


# How to Measure Hinge Overlay

## What is Hinge Overlay

Hinge Overlay is the amount that a cabinet door covers the wooden frame on the front of a cabinet. This is important because for your new cabinet doors to properly cover your openings you need the correct hinge overlay.

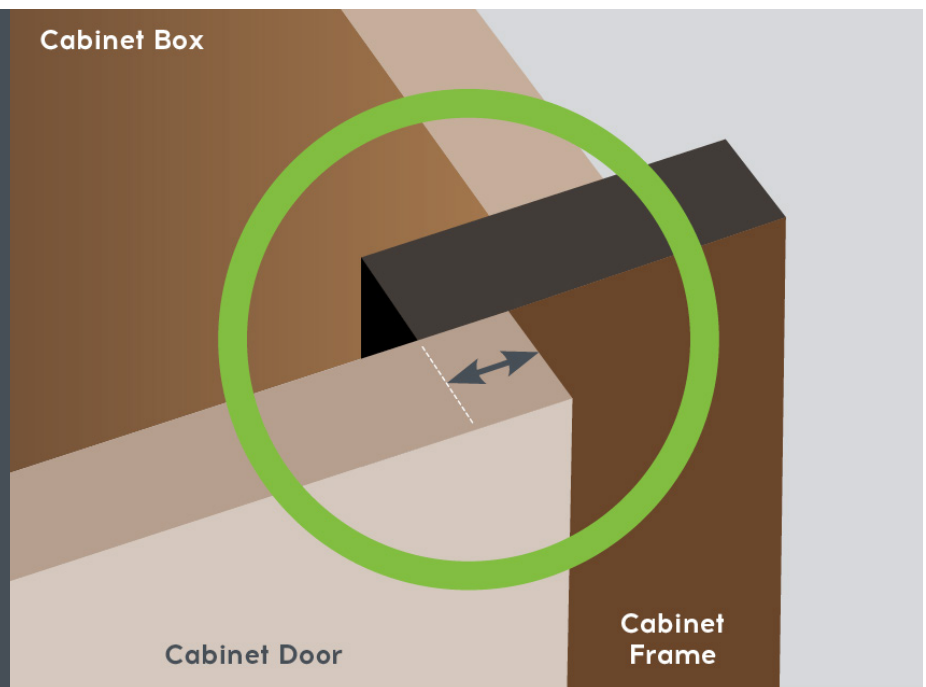

## How to Calculate Hinge Overlay (Step by Step)

- 1 Measure the door width of a single door.
- 2 Measure the cabinet opening behind that door.
- 3 Subtract the opening width from the door width.
- 4 Divide the difference by 2.
- 5 This is your Hinge Overlay.

$$\begin{array}{r} \text{Door Width: } 18.5'' \\ - \text{Opening Width: } 17.5'' \\ \hline \text{Difference: } 1.0'' \\ \div 2 \end{array}$$

**Hinge Overlay = 0.5"**



Scan the QR code to watch a 'How To' video.

